
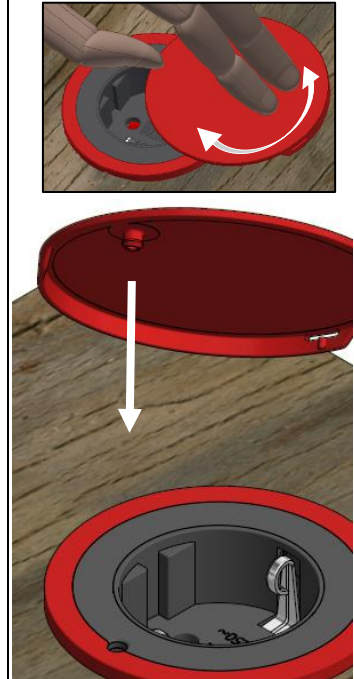



DE- passend wählen  
GB- choose suitable  
FR- sélectionnez appropriée  
ES- escoger adecuado  
RO- selectati adecvat

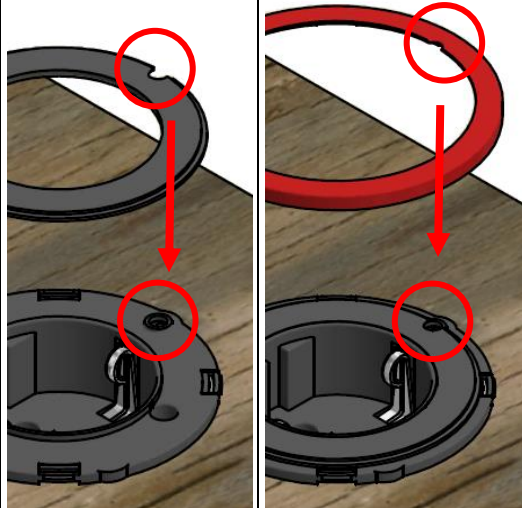

\*  DE- \*Spannungsfrei demontieren  
GB- \*Volt-free dismounting  
FR- \*Démontage hors tension électrique  
ES- \*Desmontar sin voltaje  
RO- \*a nu se demonta cât timp se află sub tensiune electrică